



Veranda Sabit Tavan / Veranda Fixed Roof
Kış Bahçesi Sistemi / Winter Garden System

Real
CAM BALKON

ALUMINIUM PROFILE SYSTEMS


Real
CAM BALKON






Veranda Sabit Tavan / Veranda Fixed Roof


Profil Kesitleri / Profile Sections

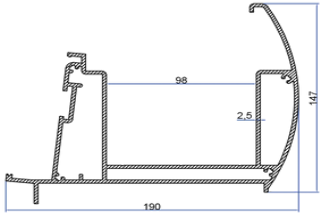


Profile No	kg/m
VRND-1801	5,72

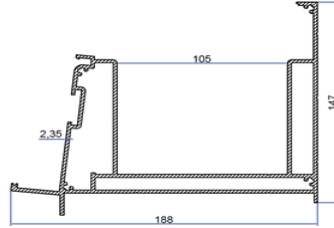


Profile No	kg/m
VRND-1815	5,5

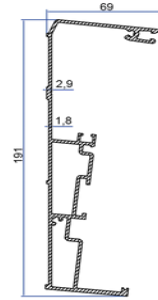


Profile No	kg/m
VRND-1802	2,7

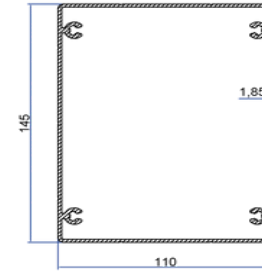


Profile No	kg/m
VRND-1804	3,3




Profile No	kg/m
VRND-1812	0,22




Profile No	kg/m
VRND-1810	0,33

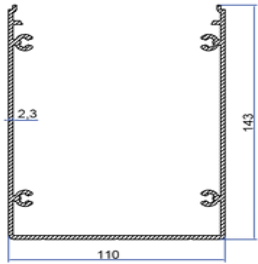


Profile No	kg/m
VRND-1805	3,1




Profile No	kg/m
VRND-1806	,93

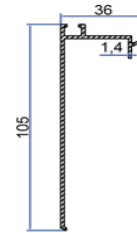


Profile No	kg/m
VRND-1803	,62




Profile No	kg/m
VRND-1818	,45




Profile No	kg/m
VRND-1811	0,44

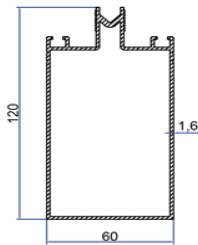


Profile No	kg/m
VRND-1807	1,88

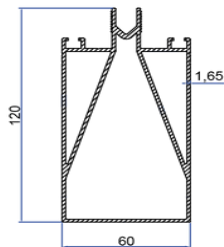


Profile No	kg/m
VRND-1808	2,49

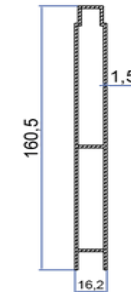

Profile No	kg/m
VRND-1814	1,49

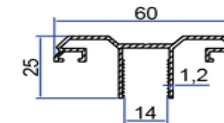

Profile No	kg/m
VRND-1809	0,56



Profile No	kg/m
VRND-1813	0,31

Veranda Sabit Tavan / Veranda Fixed Roof

Profiller / Profiles

Real
CAM BALKON




110x145 U Dikme Profili

110x145 Column(U)Profile

Product Code: VRND-1805

Weight kg/m: 3,1
(143 x 110 x 2,3mm)

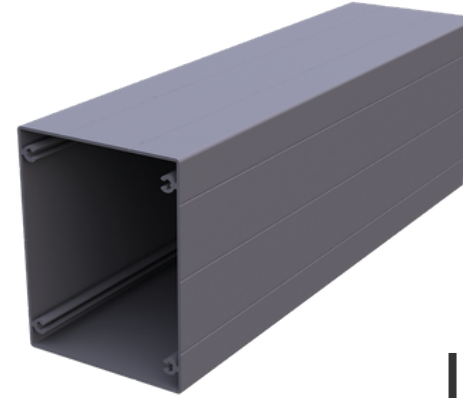

110x145 Dikme Profili

110x145 ColumnProfile

Product Code: VRND-1804

Weight kg/m: 3,27
(145 x 110 x 1,85mm)



110x145 Dikme Kapak Profili

110x145 ColumnCoverProfile

Product Code: VRND-1806

Weight kg/m: 0,93



Arka Askı Profili

RearHanger Profile


Product Code: VRND-1802

Weight kg/m: 2,7
(191 x 69 x 1,8mm)

Veranda Sabit Tavan / Veranda Fixed Roof

Profiller / Profiles

Real
CAM BALKON

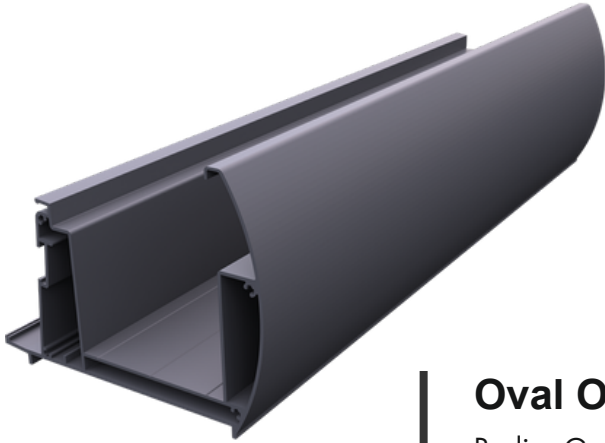


Oval Oluk Profili

Radius Groove Profile Product

Code: VRND-1801

Weight kg/m: 5,72
(147 x 190 x 2,5mm)

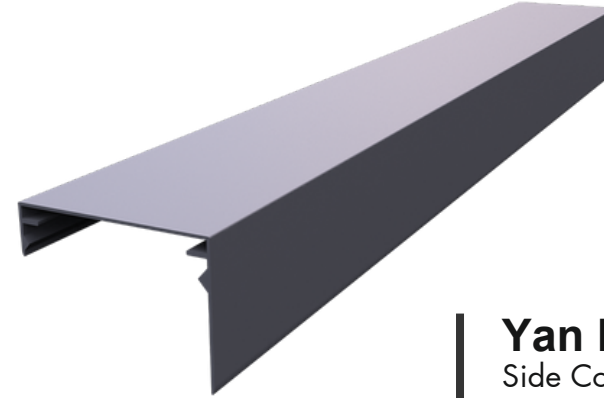


Yan Kapak Profili

Side Cover Profile

Product Code: VRND-1811

Weight kg/m: 0,44
(45 x 63 x 1mm)

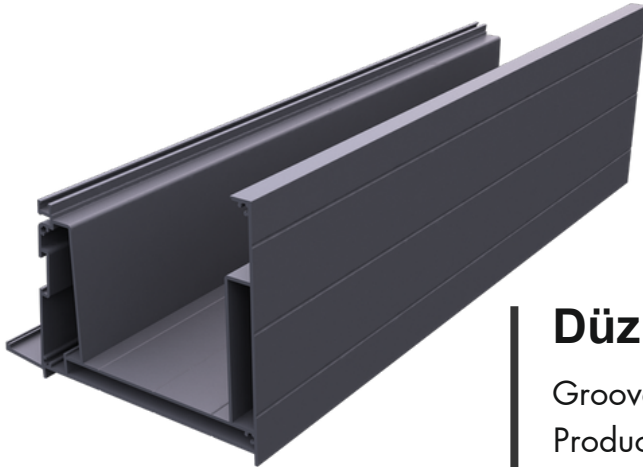


Düz Oluk Profili

Groove Profile

Product Code: VRND-1815

Weight kg/m: 5,5
(147 x 188 x 2,35mm)

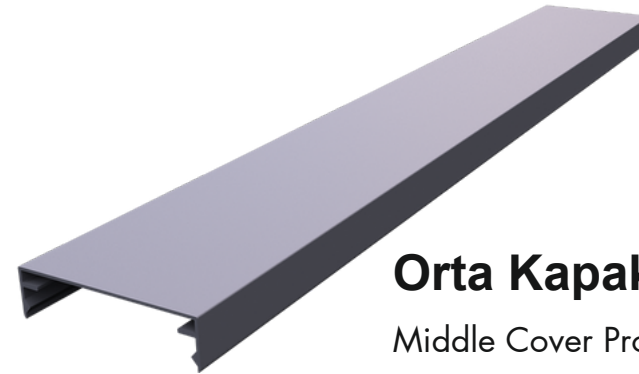

Orta Kapak Profili

Middle Cover Profile Product

Code: VRND-1810

Weight kg/m: 0,33
(16 x 62 x 1mm)

Veranda Sabit Tavan / Veranda Fixed Roof

Profiller / Profiles

Real
CAM BALKON



Baskı Profili

Pressure Profile Product

Code: VRND-1809

Weight kg/m: 0,56
(25 x 60 x 1,2mm)



Takviyeli Cam Kayıt Profili

Reinforced Carrier Profile

Product Code: VRND-1808

Weight kg/m: 2,49
(120 x 60 x 1,65mm)



Cam Kayıt Profili

Carrier Profile

Product Code: VRND-1807

Weight kg/m: 1,88
(120 x 60 x 1,6mm)



Oluk Ve Arka İç Kapak Profili

Cover Profile For Groove & Wall Connection Profile

Product Code: VRND-1803

Weight kg/m: 0,62

Veranda Sabit Tavan / Veranda Fixed Roof

Profiller / Profiles

Real
CAM BALKON




15 x 160 Lambri

15 x 160 Lambri Product

Code: VRND-1814

Weight kg/m: 1,49

(160 x 16 x 1,6mm)

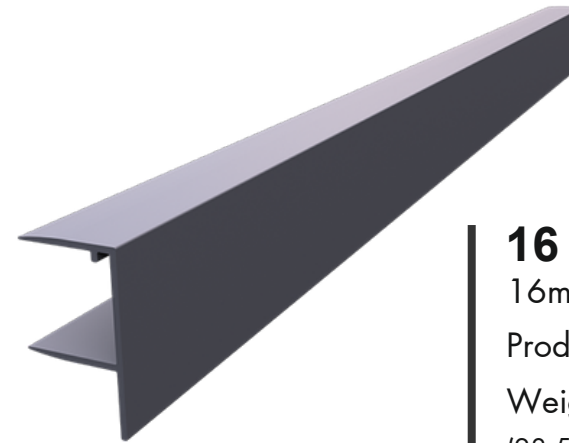

16 mm F Profili

16mm F Profile

Product Code: VRND-1812

Weight kg/m: 0,22


(28,5 x 26 x 1mm)

16 mm H Profili

16mm H Profile

Product Code: VRND-1813


Weight kg/m: 0,31

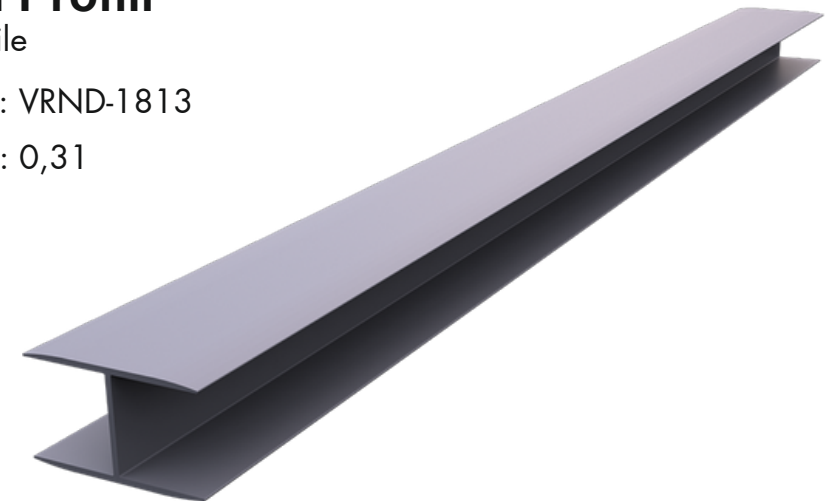

Veranda Sabit Tavan / Veranda Fixed Roof


Aksesuarlar / Accessories

Real
CAM BALKON

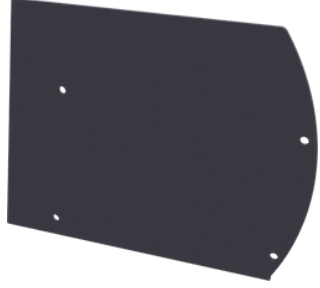

Oval Oluk Sacı

Steel Part Of Radius Groove Profile
Product Code: VRND-2005

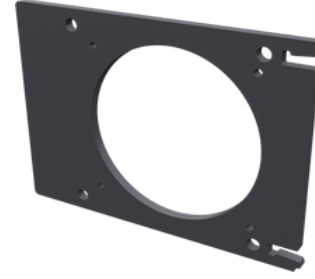

Kapaklı Dikme Üst Bağlantı Sacı

Steel Part Of Column Profile Top Connection
Product Code: VRND-2010




Düz Oluk Sacı

Steel Part Of Groove Profile
Product Code: VRND-2016



Arka Askı Profil Kapak Sacı

Steel Part Of Wall Connection Profile
Product Code: VRND-2004

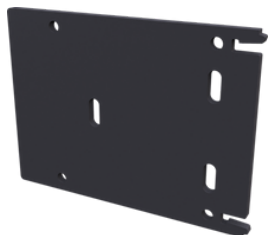

Kapaklı Dikme Alt Bağlantı Sacı

Steel Part Of Column Profile
Bottom Connection
Product Code: VRND-2009



110x145 Dikme Üst Bağlantı Sacı

Steel Part Of 110x145 Column
Profile Top
Connection Product Code: VRND-2008

Veranda Sabit Tavan / Veranda Fixed Roof

Aksesuarlar / Accessories

Real
CAM BALKON



110 x 145 Alt Pabuç

110 x 145 Column Lug

Product Code: VRND-2007



Cam Kayıt Bağlantı Sacı

Steel Part Of Carrier Profile Product

Code: VRND-2006



Baskı Contası

EPDM For Carrier Profile

Product Code: VRND-2002



Arka Baskı Contası

EPDM For Wall Connection Profile

Product Code: VRND-2003

Veranda Sabit Tavan / Veranda Fixed Roof

Aksesuarlar / Accessories

Real
CAM BALKON



24V / 5A Led Trafo
24V / 5A Led Transformer
Product Code: VRND-2015




75' lik Filtre
75 mm Filter
Product Code: VRND-2001



24V Spot Led Siyah
24V Spotlight Black
Product Code: VRND-2011



24V Spot Led Beyaz
24V Spotlight White
Product Code: VRND-2012

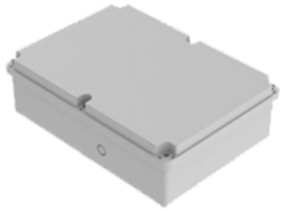




Veranda Led Kontrol Ünitesi
Spotlight Control Module
Product Code: VRND-2013



2 x 0.75 Led Kablosu (Bakır)
2 x 0.75 Led Cable (Copper)
Product Code: VRND-2014

Veranda Sabit Tavan / Veranda Fixed Roof

Real
CAM BALKON

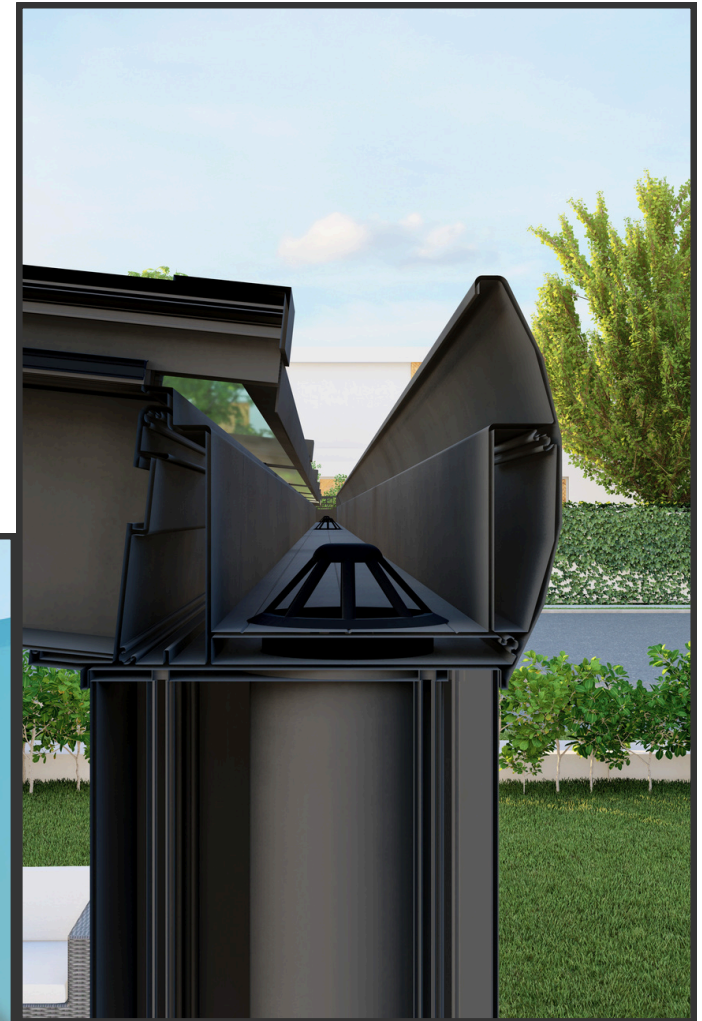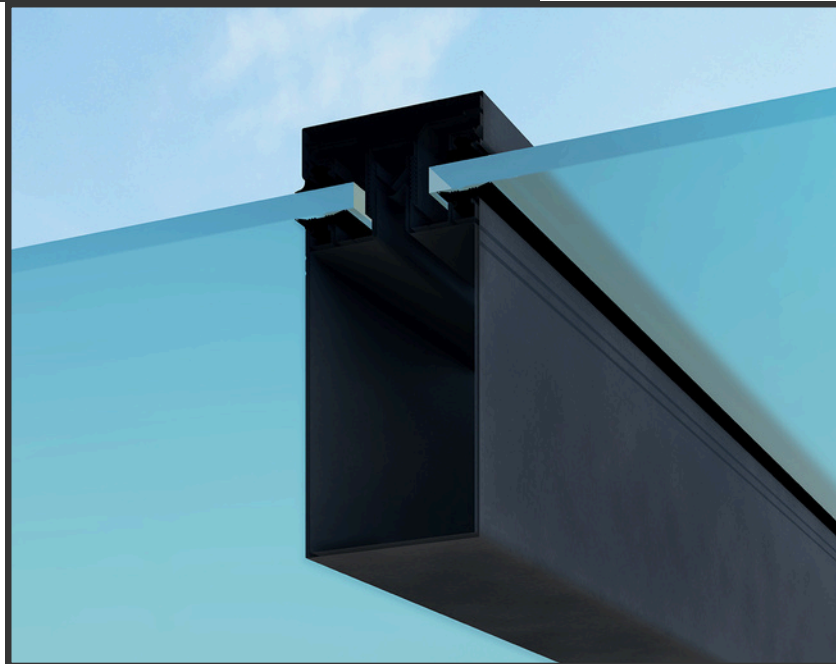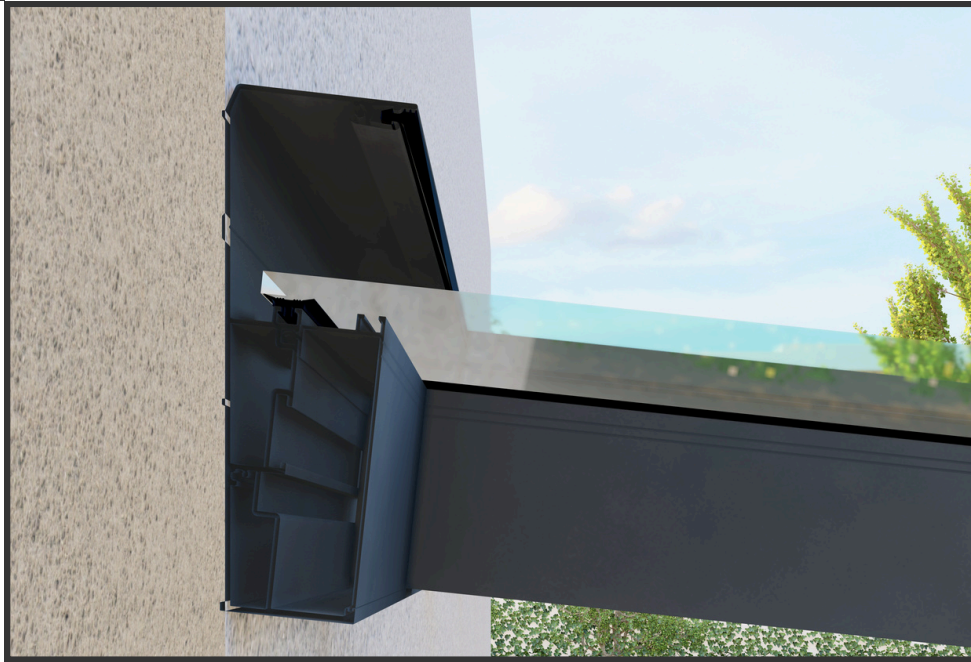




REALCAMBALKON

Veranda Sabit Tavan / Veranda Fixed Roof

Montaj / Montage

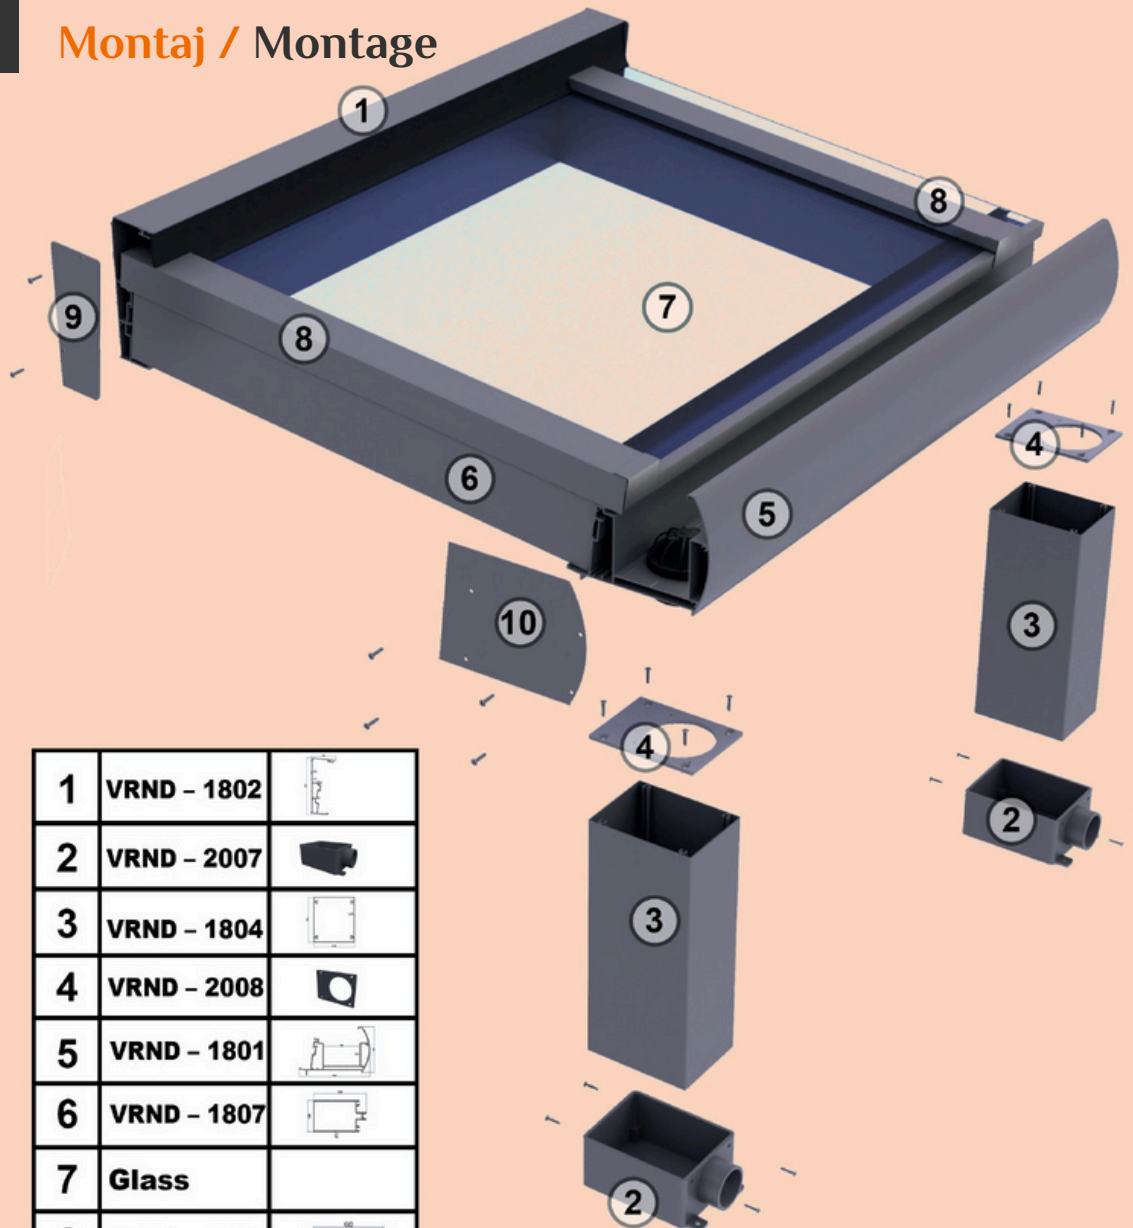

1	VRND - 1802	
2	VRND - 2007	
3	VRND - 1804	
4	VRND - 2008	
5	VRND - 1801	
6	VRND - 1807	
7	Glass	
8	VRND - 1809	
9	VRND - 2004	
10	VRND - 2005	



Montaj işlemine başlamadan önce, montaj yapılacak alan önceki ölçümlere göre belirleyin ve ürünün montajıyla ilgili gerekli ekipmanları hazır hale getirin.

1- Ürün kodu VRND – 1802 Arka Askı Profili'ni, belirtilen ölçüler doğrultusunda duvara monte edin.

Ayakların Montajı:

2- Ürün kodu Alt Pabuç - VRND-2007'yi ölçülen yere monte edin.

3- Dikme Profili – VRND – 1804'ü Alt Pabuç'un içine yerleştirip vidaları sıkın.

4- Dikme Üst Bağlantı Sacı – VRND – 2008 parçasını ayağın üstüne monte edin.

Oluk Montajı:

5- Oval Oluk Profili – VRND – 1801'i resimde gösterildiği şekilde ayağın üzerine monte edin.

Camların Yerleştirilmesi:

6- Cam Kayıt Profili – VNDR 1807'yi VRND – 1802 Arka Askı Profili ve Oluk Profili – VRND – 1801 arasına, daha önce duvara monte ettiğiniz Cam Kayıt Bağlantı Sacı – VNDR – 2006 ile birlikte, resimde gösterildiği şekilde yerleştirip monte edin. Bu işlemi cam sayısına ve camların yerleşimine göre tekrarlayın.

7- İlk camı yerine yerleştirin.

8- Baskı Profili – VRND – 1809'u resimde gösterildiği şekilde Cam Kayıt Profili – VNDR 1807'nin üstüne yerleştirin, cam arada kalmasına dikkat edin.

** 7 ve 8. adımları tüm camlar için uygulayın.

9- Son olarak, resimde gösterildiği gibi kapakları yerleştirin.

Before starting the installation, make sure to define the installation area according to the previous measurements and prepare all the necessary tools for the product assembly.

1- Install the product code VRND – 1802 Arka Askı Profili (Back Hanger Profile) on the designated wall (according to the measurements).

Installing the Bases:

2- Install the product Alt Pabuç - VRND-2007 on the measured ground.

3- Place the Dikme Profili – VRND – 1804 inside the Alt Pabuç and tighten the screws.

4- Attach the Dikme Üst Bağlantı Sacı – VRND – 2008 piece to the top of the post.

Installing the Gutter:

5- Install the Oval Oluk Profili – VRND – 1801 on top of the posts as shown in the image.

Placing the Glass:

6- Attach the Cam Kayıt Profili – VNDR 1807 to the VRND – 1802 Arka Askı Profili, which you have already mounted on the wall, and the Oval Oluk Profili – VRND – 1801 using the Cam Kayıt Bağlantı Sacı – VNDR – 2006, as shown in the image. Repeat this process based on the number and placement of the glass panels.

7- Place the first glass in its position.

8- Place the Baskı Profili – VRND – 1809 on top of the Cam Kayıt Profili – VNDR 1807 as shown in the image, ensuring that the glass is placed between them.






** Repeat steps 7 and 8 for all the glass panels in sequence.

9- Finally, place the caps as shown in the image.

Veranda Sabit Tavan / Veranda Fixed Roof

Montaj / Montage

Real
CAM BALKON

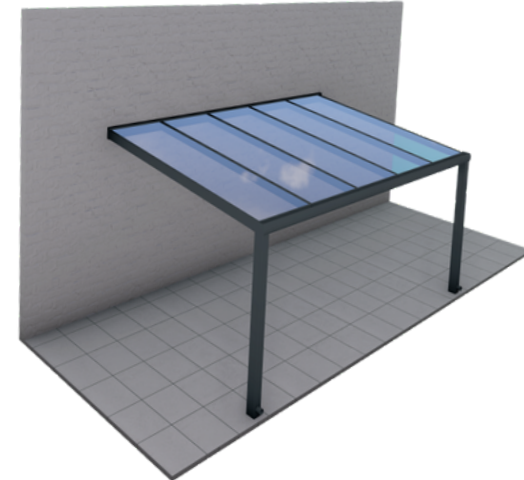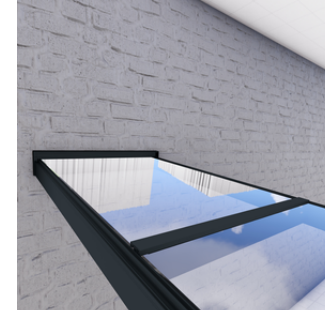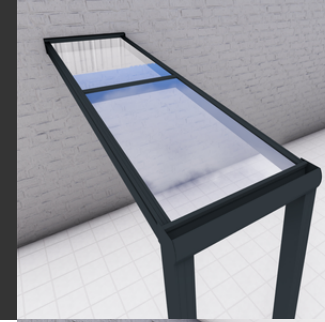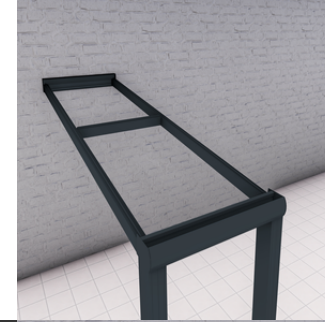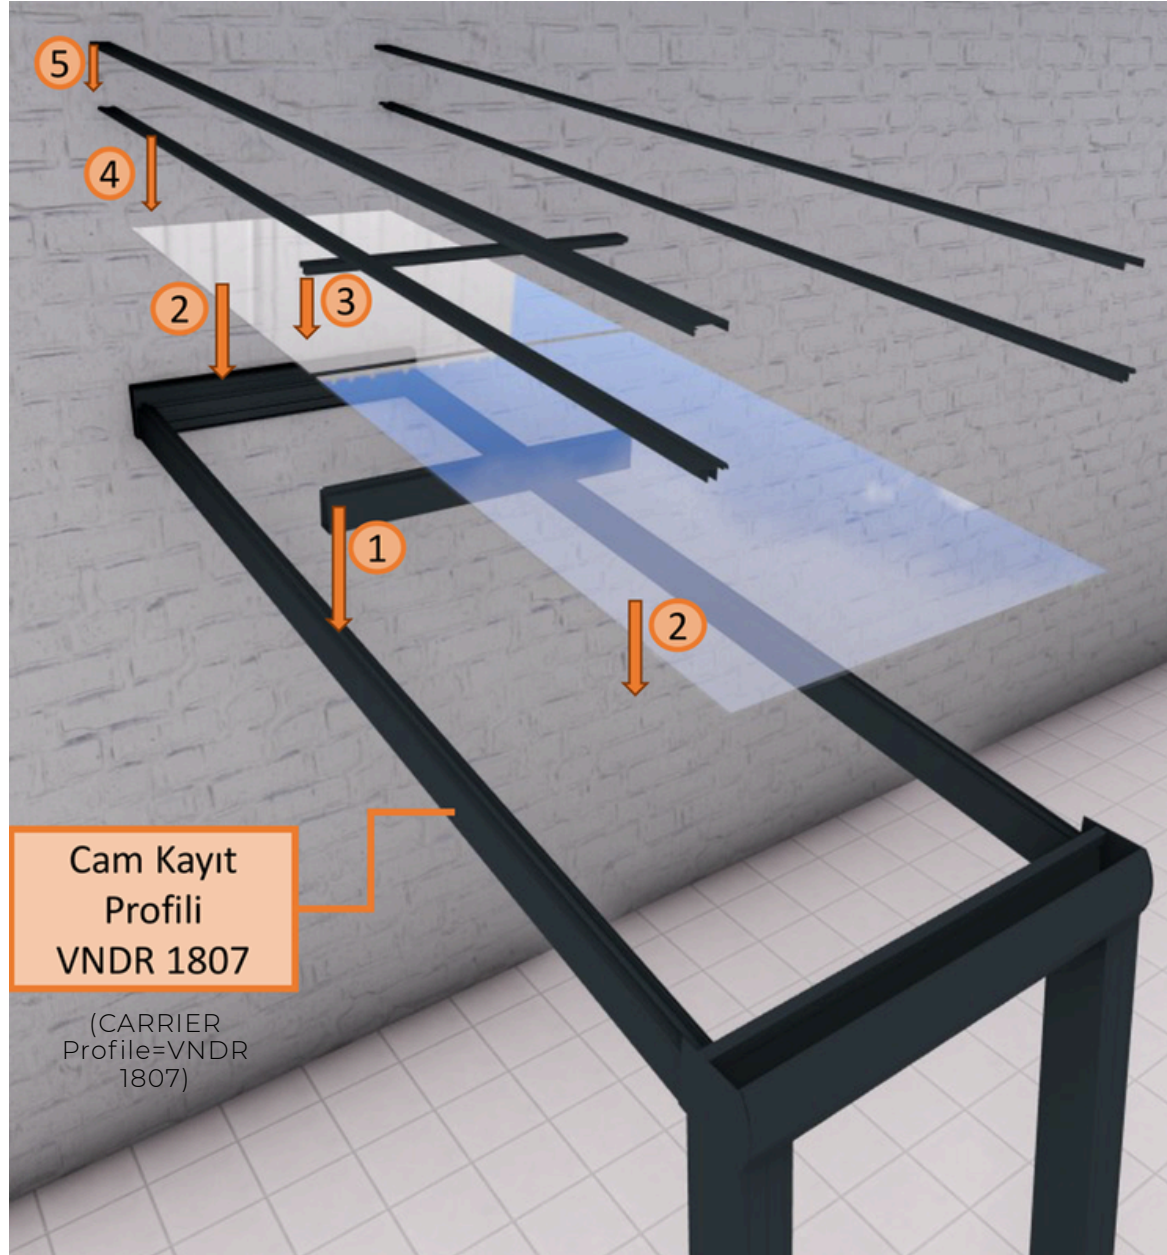

Veranda Sabit Tavan / Veranda Fixed Roof

Montaj / Montage

**** Eğer alanınızın derinliği 4 metreden fazla ise, camlar tek parça olmayacak ve aralarına Kayıt Profili yerleştirilecektir. Bu durumda montaj için aşağıdaki adımları takip etmeniz gerekir:**

(Kayıt Profili, daha küçük boyutlarda kesilmiş Cam Kayıt Profili – VNDR 1807 olup, yan Cam Kayıt Profili – VNDR 1807 profillerine dik olarak kesilerek aralarına yerleştirilir.)

- 6. adımı tamamladıktan ve Cam Kayıt Profili – VNDR 1807’yi monte ettikten sonra, Kayıt Profilini belirtilen ölçüler doğrultusunda Cam Kayıt Profili – VNDR 1807’nin arasına, resimde gösterildiği gibi yerleştirip monte edin.
- Camları Cam Kayıt Profili – VNDR 1807 üzerine yerleştirin.
- Baskı Profili – VRND – 1809 ve Kayıt üzerindeki parçayı camların üzerine yerleştirip monte edin.
- Bu işlemleri tüm camlar için uygulayın.

9- Son olarak, resimde gösterildiği gibi kapakları yerleştirin.

**** If the depth of your space is more than 4 meters, the glass panels will not be in a single piece, and a CARRIER Profile will be placed between them. For assembly in this case, follow the steps below:**

(The CARRIER Profile is the CARRIER PROFILE – VNDR 1807 cut into smaller sizes, placed vertically between the side CARRIER PROFILE – VNDR 1807 profiles.)



- 1-After completing step 6 and installing the CARRIER PROFILE – VNDR 1807, place and install the CARRIER Profile between the CARRIER PROFILE – VNDR 1807 profiles as shown in the image, according to the specified measurements.
- 2-Place the glass panels on top of the CARRIER PROFILE – VNDR 1807.
- 3-Place and install the PRESSURE PROFILE – VRND – 1809 and the piece on top of the CARRIER onto the glass panels.
- 4-Repeat this process for all the glass panels.
- 5- Finally, place the caps as shown in the image.



Veranda Sabit Tavan / Veranda Fixed Roof

Montaj / Montage

Real
CAM BALKON

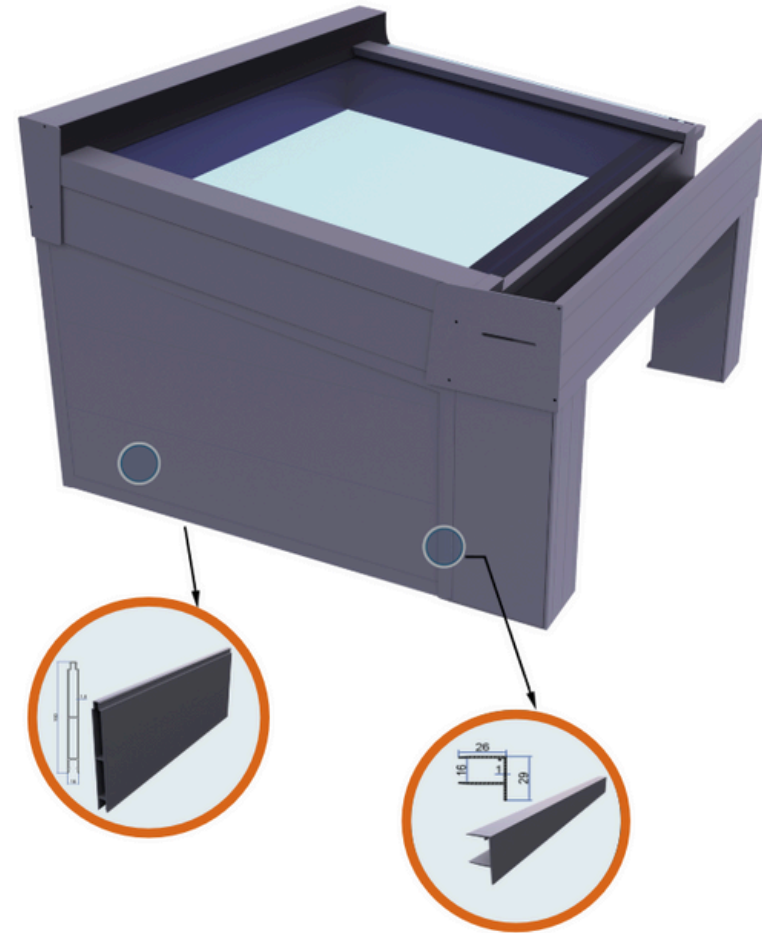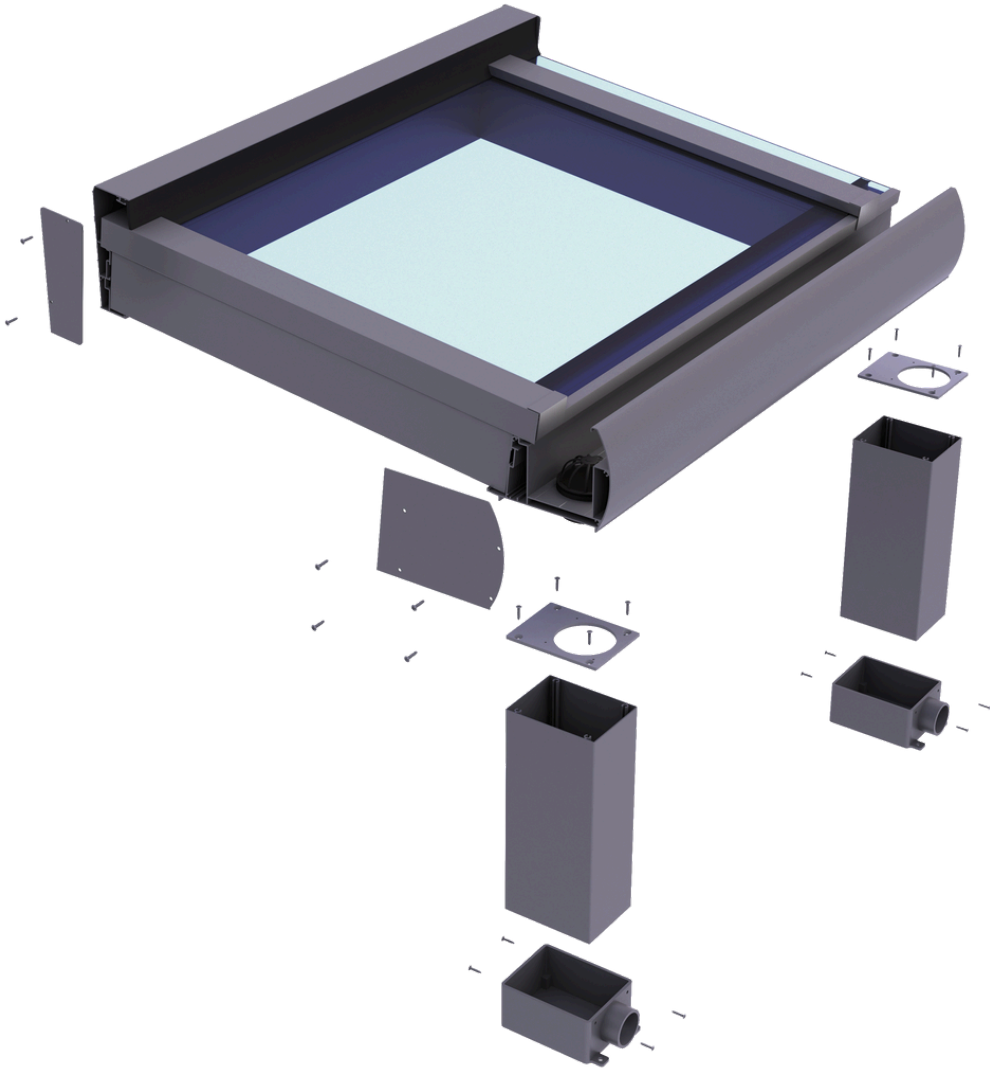

Veranda Sabit Tavan / Veranda Fixed Roof

Cam Seçenekleri / Glass Options



Real
CAM BALKON



Isıcam

Insulating Glass Minimum 8 mm -
Maximum 26 mm



Lamine Cam

Laminated Glass Minimum 8 mm -
Maximum 10 mm

Temperli Cam


Tempered Glass Minimum 8 mm -
Maximum 10 mm



Polikarbon

Polycarbonate

Minimum 8 mm - Maximum 16 mm

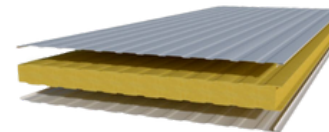

Sandviç Cephe Panel

Sandwich Facade panel

40 mm



Real
CAM BALKON



Real CAM BALKON

www.realcambalkon.com

info@realcambalkon.com

+90 850 466 7325

ADDRESS (YALOVA): ÇİFTLİK MAH. YALOVA-İZMİT KARAYOLU ÜZERİ 6.KM NO:352 İÇ KAPI NO:1 77600 ÇİFTLİKKÖY/ YALOVA / TÜRKİYE

ADRESS (BURSA): KÜÇÜKBALIKLI MAH. 8. GÜVEN SK. NO:8, OSMANGAZI / BURSA / TÜRKİYE